

# Feathercraft Personal Tether

---

The personal tether attaches you to your kayak so that you cannot be separated from it in the event of a wet exit. Ours features a very small stuff sack which holds approximately 4.5 meters (15 ft.) of webbing. One end of the webbing is attached to the kayak. The other end is attached to either a quick release waist belt, or to your PFD. We especially recommend the tether for our sit-on-top kayaks. If you capsize in heavy wind, you may not be able to swim as fast as your kayak is drifting. Always detach the tether before entering beach surf to avoid entanglement.

